

UCFX3-P3V

FFP3 NR D Respirator

PROTECTION LEVEL



P3 Protection

Product Datasheet

OUR REF: UCFX3-P3V

PRODUCT DESCRIPTION

Space saving three panel fold flat respirator designed for single use. Light and comfortable with foam nose seal, adjustable nose clip and comfort valve. Tri-fold design for extra space for added comfort and lower breathing resistance. Colour coded for easy identification of protection levels. Dolomite tested. Maintenance free

RETAIL PACKAGING AVAILABLE: Yes

AVAILABLE SIZES: ONE SIZE

PACKAGING: Per Box: 10 masks

Per Case : 200 masks
(20 boxes of 10 masks)

PROTECTION LEVEL: Red

NOTE: A properly selected respirator is essential to protect your health. Before using this respirator consult a suitably qualified Safety Professional to determine the suitability of the product for your intended use.



Technical Details

This mask meets the requirements of **EN149:2001 FFP3** and offers protection against non-toxic and low-to-average toxicity and high toxicity solid and liquid aerosols (e.g. oil-mists) in concentrations up to 50 x MAC/OEL/TLV or 20 x APF.

MEETS:

EN 149:2001+
A1:2009 FFP3 NR D

Certified in the UK by: INSPEC International Limited, 56 Leslie Hough Way, Salford, Greater Manchester, M6 6AJ, United Kingdom. (NOTIFIED BODY 0194)

- **Storage:** Keep respirators in the display box away from direct sunlight or contaminants until use. Ambient storage conditions should not exceed 25 deg C and 50% Relative Humidity.
- This product is intended for **single use only**. No maintenance is necessary. Discard respirator after use or if damaged in any way.
- This product does NOT protect the wearer against gases, vapours and solvents (e.g. from paint spraying operations) and should not be used in atmospheres containing less than 19.5% oxygen.
- Leave the work area immediately if a) breathing becomes difficult or b) dizziness or other distress occurs.
- Do not use when concentrations of contaminants are immediately dangerous to health or life. This product has an aluminium nosepiece and the manufacturer advises against this type of product being used in an explosive atmosphere.
- Facial hair, beards and certain facial characteristics may reduce the effectiveness of this respirator.
- Never alter or modify this respirator in any way (except as indicated in the instructions)
- The length of time this respirator can be used depends on contaminants present but should not exceed one shift. The respirator should be replaced sooner if breathing becomes difficult or if the user notes any irritation, taste or smell.
- Failure to follow all instructions and limitations on the use of this product could reduce the efficiency of the respirator and result in serious damage to health or death. Unless fitted according to instructions, the respirator will not provide the expected level of protection.

For more information contact :

T: +44 (0) 1902 451 451 **F:** +44 (0) 1902 451 276
E: sales@ultimateindustrial.co.uk
www.ultimateindustrial.co.uk

Ultimate Industrial Limited


Victoria House,
Colliery Road,
Wolverhampton, WV1 2RD
United Kingdom



UCFX3-P3V

FFP3 NR D Respirator

PROTECTION LEVEL

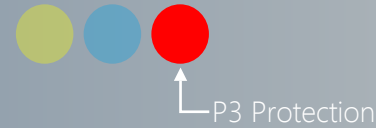

Fitting Instructions

OUR REF: UCFX3-P3V

PRODUCT DESCRIPTION

Space saving three panel fold flat respirator designed for single use. Light and comfortable with foam nose seal, adjustable nose clip and comfort valve. Tri-fold design for extra space for added comfort and lower breathing resistance. Colour coded for easy identification of protection levels. Dolomite tested. Maintenance free

RETAIL PACKAGING AVAILABLE: Yes

AVAILABLE SIZES: ONE SIZE


PACKAGING: Per Box: 10 masks

Per Case : 200 masks
(20 boxes of 10 masks)

PROTECTION LEVEL: Red

NOTE: A properly selected respirator is essential to protect your health. Before using this respirator consult a suitably qualified Safety Professional to determine the suitability of the product for your intended use.

STEP 1:

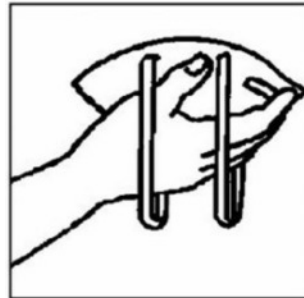

STEP 2:



STEP 3:



STEP 4:



INSTRUCTIONS FOR USE:

Respiratory protection is only effective if correctly selected, fitted and worn for the complete period of exposure to hazards

- Read ALL instructions and warnings carefully before use.

1. Hold the mask in hand with the nose-piece up. Allow headband to hang freely and gently open mask.
2. Position the mask under the chin covering mouth and nose and pull the headband over the head and position behind head.
3. Press soft nose piece to conform snugly around the nose.
4. To check fit, cup both hands over the mask and exhale vigorously. If air flows around nose, tighten the nosepiece. If air leaks around the edge, reposition the headband for better fit. Retest the seal and repeat the procedure until the mask is sealed properly.

For more information contact :

T: +44 (0) 1902 451 451 **F:** +44 (0) 1902 451 276
E: sales@ultimateindustrial.co.uk
www.ultimateindustrial.co.uk

Ultimate Industrial Limited

Victoria House,
 Colliery Road,
 Wolverhampton, WV1 2RD
 United Kingdom

